
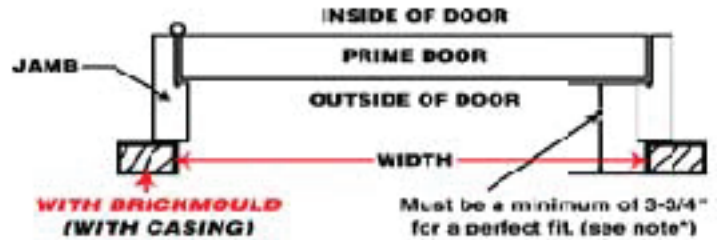


The Perfect Fit

How to measure your doorway for a new storm door

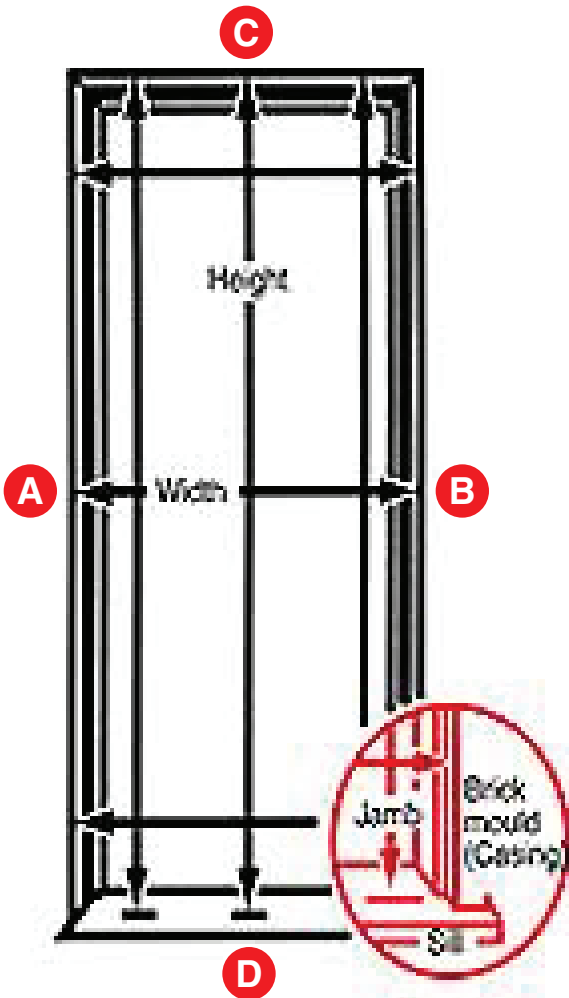

1. Stand facing the outside of your door.
2. Do not measure your existing storm or prime door.
3. For the WIDTH, measure the distance from A to B in the diagram (between the brick mold) at the top, centre, and bottom of the doorway. Use the shortest measurement.
4. For the HEIGHT, measure between C and D (on the brick mold and sill) at the left, centre, and right of the doorway. Use the shortest measurement.

AluminArt Sizes and Fit Ranges

Examples of Sizes to Order

Nominal Door Size	Fits widths between	Fits heights between
32" x 80"	31-3/4" & 32-5/8"	79-3/4" & 80-5/8"
33" x 80"	32-3/4" & 33-5/8"	79-3/4" & 80-5/8"
34" x 80"	33-3/4" & 34-5/8"	79-3/4" & 80-5/8"
34" x 82"	33-3/4" & 34-5/8"	81-3/4" & 82-5/8"
36" x 80"	35-3/4" & 36-5/8"	79-3/4" & 80-5/8"

Some sizes shown may be special order. Other custom sizes are available as special order for most door models as follows:

Widths from 29" to 37" (in 1" increments)
 Heights from 76" to 84" (in 1" increments)